Steering Wheel Control Switch Assembly Replacement

Removal Procedure

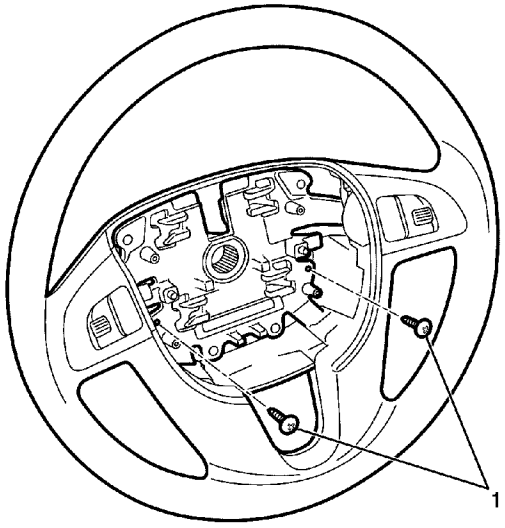

1. Disable the occupant protection system. Refer to SIR Disabling and Enabling.
2. Remove the steering wheel inflatable restraint. Refer to Inflatable Restraint Steering Wheel Module Replacement.
3. Remove the steering wheel. Refer to Steering Wheel Replacement.
4. Remove the steering wheel hub to rear cover screws (1).

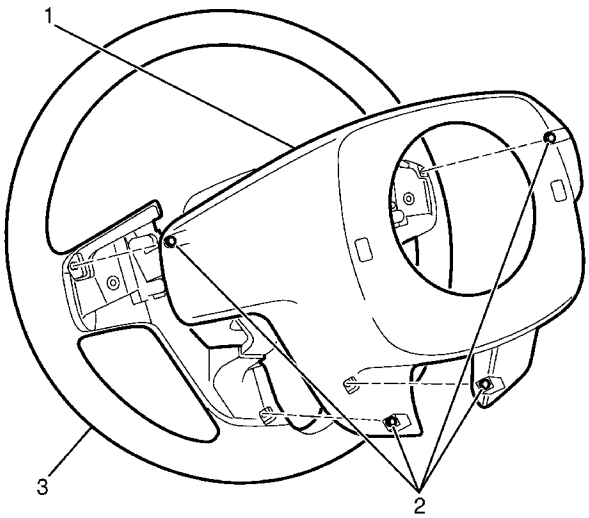

© 2010 General Motors Corporation. All rights reserved.

Note: Disengage the retaining lugs (2).

5. Remove the rear cover (1) from the steering wheel hub (3).

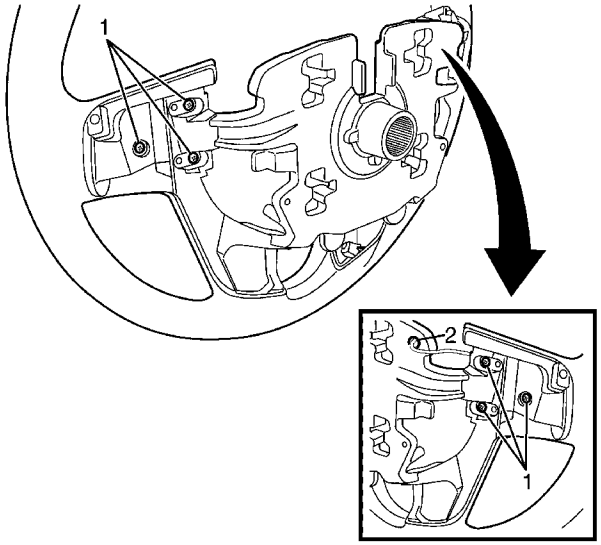

6. Remove the steering wheel hub to steering wheel audio control switch assembly screws (1).
7. Remove the steering wheel audio control switch assembly harness grounding screw (2).

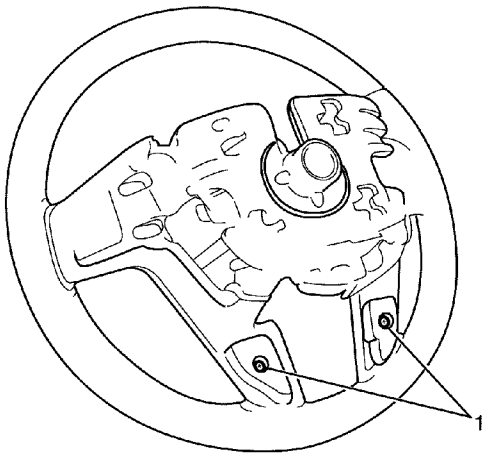

8. Remove the steering wheel hub to steering wheel spoke trim retaining screws (1).
9. Remove the steering wheel audio control switches from the steering wheel hub assembly.

Installation Procedure

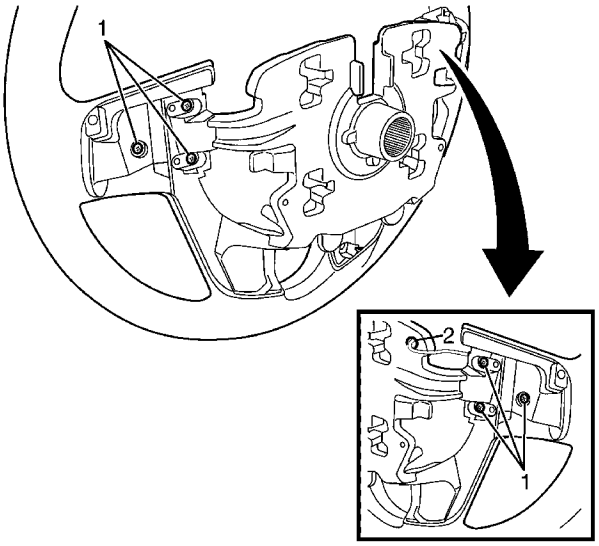

1. Install the steering wheel audio control switches from the steering wheel hub assembly.

Caution: Refer to Fastener Caution in the Preface section.

2. Install the steering wheel audio control switch assembly harness grounding screw (2) and tighten to **1 N·m (9 lb in)**.
3. Install the steering wheel hub to steering wheel audio control switch assembly retaining screws (1) and tighten to **1 N·m (9 lb in)**.

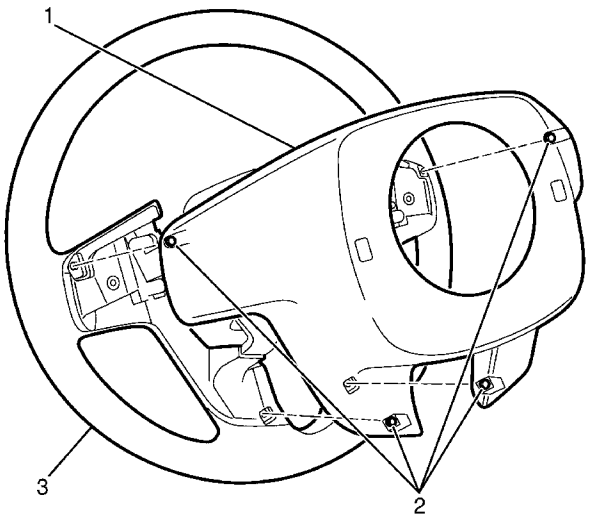

Note: Make sure that all the retainers (2) engage.

4. Install the rear cover (1) to the steering wheel hub (3).

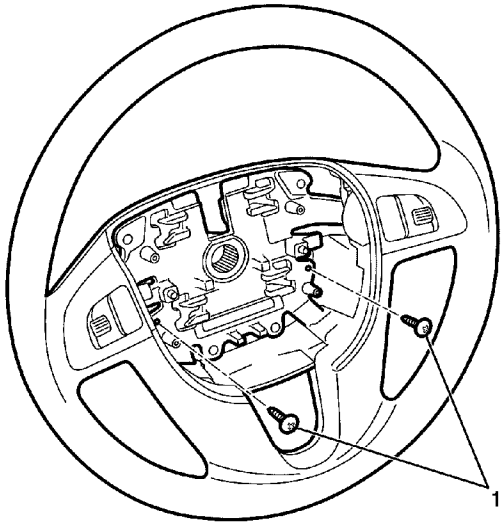

5. Install the steering wheel hub to rear cover retaining screws (1) and tighten to **1 N·m (9 lb in)**.
6. Install the steering wheel. Refer to Steering Wheel Replacement.
7. Install the steering wheel inflatable restraint. Refer to Inflatable Restraint Steering Wheel Module Replacement.
8. Enable the occupant protection system. Refer to SIR Disabling and Enabling.